

Replacing a snaplock paddle length adjuster on your STX paddle will only take a few minutes.

Required tools: a flat screwdriver and a drop of waterproof glue

Open the lever and unscrew the screws. (sizes are the same so you can re-use them). Remove the lever.



Open the clamp with a screwdriver and pull off the base clamp

Align the new clamp with the slot in the paddle, open it with a screwdriver and mount (with a bit of glue) the base clamp



Mount the lever and tighten the bolts lightly, you will see there is a bigger gap on the replacement base clamp. Slide in the top part of the paddle and close the lever.

Check the tightness to prevent sliding of the upper shaft. If it slides, open the lever, tighten the screws further, close the lever and check. There is enough space to make sure it will be always possible to lock the upperpart. Do not overtighten!